

B3bag®

Instructions and tips

B3 Bags

Instructions and tips



Easy to take your luggage/ groceries onto your bike

B3bag[®]

Responsibility

The user should attach the bag in a proper way to the bike. The hooks should be adjusted according to the instruction in this instruction guide. The user should always use the lock. The bags should not be overloaded.

B3 is not responsible for any accidents that are the consequence of a bag that falls from the bike. Accidents that happen with the bag are the user's responsibility.



B3bag[®]



Specifications

Size:	24 x 70 x 20 cm (l x h x d)
Volume:	max 34 liter
Weight:	1,9 kg
Payload:	15 kg

Advantages

- Large practical pannier with a pull-out handle and free-rolling wheels.
- The ideal solution for doing groceries and travelling.
- Easily get extra space by rolling out the roll closure top.
- 2 Adaptable hooks which can easily be attached to the baggage carrier of any kind of bicycle and 2 ergonomic handgrips to relieve your back.
- Made of strong, durable and watertight materials.
- Comes in three bright and fresh colors.
- Can also be used with a child seat connected to the bicycle.
- With 2 bags you can do your weekly groceries and leave your car unused.
- Also handy as a travelling bag: you can hook up the bag on a rental bike on arrival for the last leg of your journey.

www.b3bag.eu

B3bag[®]



Adjusting the hooks

The two hooks should clamp sturdy around the bike luggage rack. The hooks can be adjusted by the screw in the hook. If the bag gets loose without pulling the strap you should adjust the hook so it clamps more sturdy.



Bottom hook option

The hook is an extra feature that can be used if you find that the bag is 'jumping' too much when it has little load. If you use the hook, you have to be careful when passing doors and poles. If the bag hits a doorpost there is a change of damage on the bag. This damage will not fall under the warranty.



B3bag®



Locking

Between the two hooks you will find a lock. Make sure you rotate this lock in the locking position while riding your bike. If not locked the bag can fall off and cause an accident. B3 is not responsible for accidents caused by this misuse. The hole in the lock can be used to add a small locking cable.



Zipper


Make sure the zipper is closed during rainy weather. If the zipper is not closed during heavy rain the bag will catch water. If this would happen you can get the water out by turning the bag upside down.



B3bag®



Pletscher

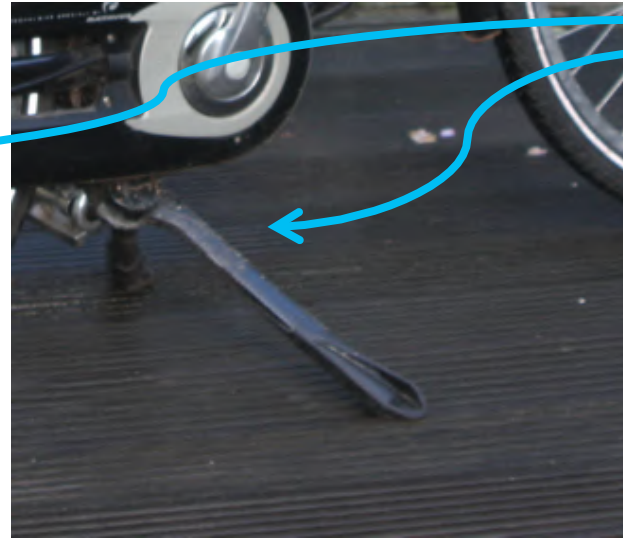

Ursus Jumbo

Bike Stand



Make sure you use a proper and stable bike stand. Because you are able to transport more weight, the stability of the bike is very important. At the left you see two bike stands that give good stability.

B3bag[®]



Extra lifting grip

This grip can be used to make it easier to mount the bag to the bike. Make sure your bag is loaded with maximum 15 kg. Above this weight we can not guarantee the durability

B3bag[®]



Closure

The b3 bag can be closed in different ways. Just use the way that is most convenient for you.

- 1 Roll is from outside to the inside or
- 2 From inside to the outside and clipped at the rear
- 3 Loose and folded downwards

B3 bag®



B3 in the shopping mall
The bag can also be
hanged on the outside of
the shopping cart.
Make sure balance the cart
to avoid it will fall over.

B3bag^{EU}



We wish you a lot of fun and enjoyment of the B3 Bag.
If you have any question or suggestion please contact us

B3bag

De Bosch Kemperlaan 8

3818 HC Amersfoort,

The Netherlands

Tel. +31 6 52685570

info@b3bag.eu

www.b3bag.eu

B3 Bag is design by Christian Suurmeijer www.greenolution.nl

Moving forward with zero emission mobility